Setting Up the NebulaGameX Console: Complete User Guide

(This guide follows documentation best practices and includes clean mock-up screenshots.)

Overview

The **NebulaGameX Console** is a next-generation gaming system designed for home entertainment. This guide walks you through unboxing, connecting, and configuring the console.

What's Included in the Box

- NebulaGameX Console
- Wireless Controller
- HDMI 2.1 Cable
- Power Adapter
- Quick-Start Card

Mock Screenshot:

```
+-----+
| [ IMAGE: Box contents neatly labeled ]|
+-----+
```

Step 1: Connect the Console to Your TV

- 1. Locate the HDMI port on the back of the NebulaGameX.
- 2. Plug one end of the HDMI cable into the console.
- 3. Connect the other end to an open HDMI port on your TV.
- 4. Ensure the cable is firmly seated.

Mock Screenshot:

```
TV (Back Panel)
[ HDMI 1 ] [ HDMI 2 ] [ HDMI 3 ]

^-- Plug cable here
```

Step 2: Power the Console

- 1. Plug the power adapter into the console's power port.
- 2. Plug the power adapter into a wall outlet or surge protector.
- 3. Press the power button on the front of the console.

Tip: A blue light indicates the console is powered on.

Step 3: Pair the Controller

- 1. Hold the **Sync** button on the controller for 3 seconds.
- 2. The console automatically detects and pairs with the controller.
- 3. When paired, the controller LED will stop blinking.

Mock Screenshot:

```
[Controller]
  ( ) Sync Button
  [LED] blinking...
```

Step 4: Initial Software Setup

- 1. Select your language.
- 2. Connect to Wi-Fi.
- 3. Sign in or create a Nebula Online account.
- 4. Install available system updates.

Mock Screenshot:

```
+-----+
| Select Language: |
| > English |
| Español |
| Français |
```

Step 5: Insert or Download Games

- To install a physical game: insert the game card into the top slot.
- To download a digital game:

- Open the Nebula Store.
- Search for the game.
- Select **Download**.

Troubleshooting

- No picture on TV \rightarrow Ensure correct HDMI input is selected.
- **Controller not pairing** → Hold Sync for 10 seconds, restart console.
- Wi-Fi issues → Move closer to router or reboot network.

You're Ready to Play!

Your NebulaGameX Console is now fully set up. Enjoy gaming!